

Scanning Mode

Trigger Mode (Default)

Scanning this bar code will enable the scanner to enter manual trigger mode.



**Trigger Mode

Auto Sense Mode

Scanning this bar code will enable the scanner to enter auto sense mode.



Automatic Scanning Mode

Continuous Mode

This mode enables the engine to scan/capture, decode and transmit over and over again.



Continuous Scanning Mode



Enter Configuration



Exit Configuration